



Window Guard Hand Release Type Small & Large Versions Fits 7" or 11" Walls

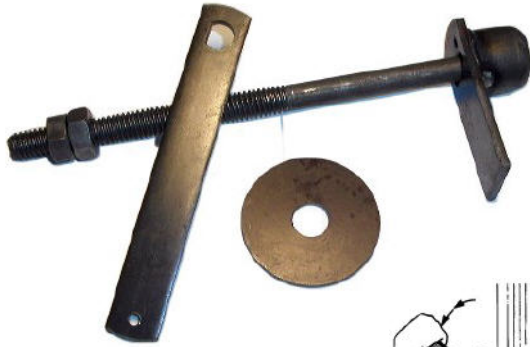

Always keep Hand Release (JER) head lubricated to ensure proper working condition, and open the unit regularly for inspection. Installs on the inside left. Pull handle down to release.

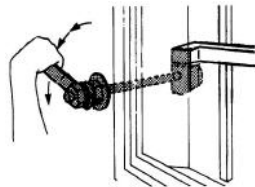


Inside View

JERS
7" Length

3/8" Dia. Threaded Rod
7" Length

1-1/4" x 2-3/4"
Welding Head Bracket

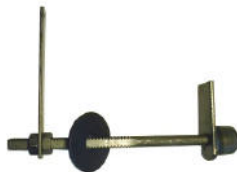


JERL
11" Length

3/8" Dia. Threaded Rod
11" Length

1-1/4" x 2-3/4"
Welding Head Bracket

Push Button Quick-Release Window Guard Release Adjustable Wall Thickness Up To 10"

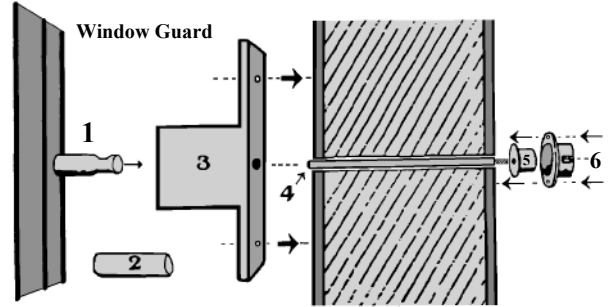

Description of parts from above

1. Steel Locking Pin
2. Paper Sleeve
3. Locking Mechanism
4. Push Rod
5. Push Button
6. Protective Cover



Push the button from the inside to release the mechanism

PBR




Operable from the inside without the use of any special tools, keys, special knowledge or effort.

Single Release Shown Below



Foot Release Stirrup Type

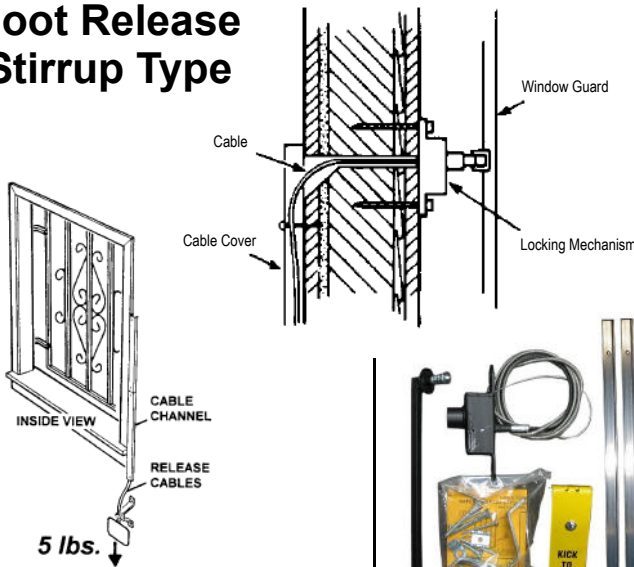


FRSTIR SGL

Single Latch Type

FRSTIR

Double Latch Type

Foot Release Kick Type

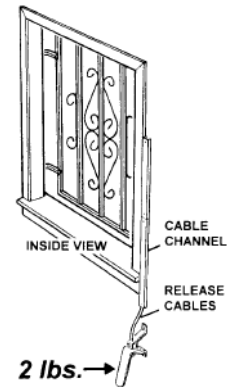

Operable from the inside without the use of any special tools, keys, special knowledge or effort.

2 lbs. →



Single Release Shown Above

FRKICK SGL

Single Latch Type

FRKICK

Double Latch Type

Window Guard Hinges

FRHINGE

Mtl. 1/2" Sq. Solid
Length 12"
Plate Size: 4" x 1-1/2"
Offset: 2-1/2"